

MANUAL

Safety Gas Burner

No. 7511 natural gas 20 mbr.

No. 7512 propane gas 60 mbr.

1

Gas burner for use with all common types of gas such as natural gas 20 mbr,
Propane gas 60 mbr.

2

The burners are connected to Bochem No. 7835 with gas hose DIN 30664
connected to the gas supply.

3

Ignition of the gas burner

- a. Turn needle valve adjustment knob (to the left)
Adjustment knob is also used for fine adjustment
- b. Press flame control button (red), gas will flow out.
- c. ignite flame.
- d. Press and hold the flame control button for about 5-10 seconds until the
bimetal in the flame is at operating temperature.
- e. Now release the flame control button, the gas supply remains open,
the main flame is now burning.

Should the main flame go out for any reason, the bimetal reacts
and closes the magnet lock and the gas supply is interrupted.